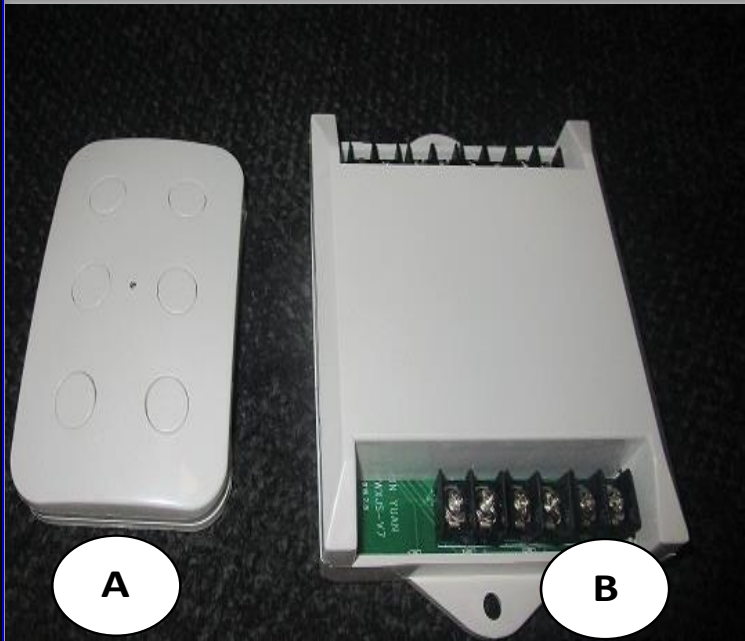


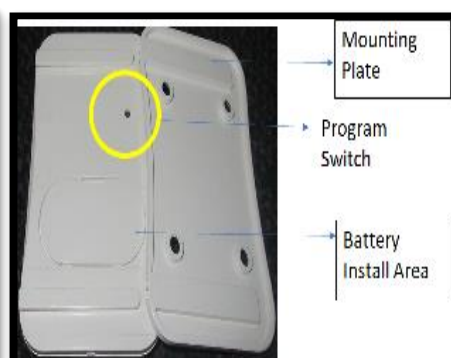
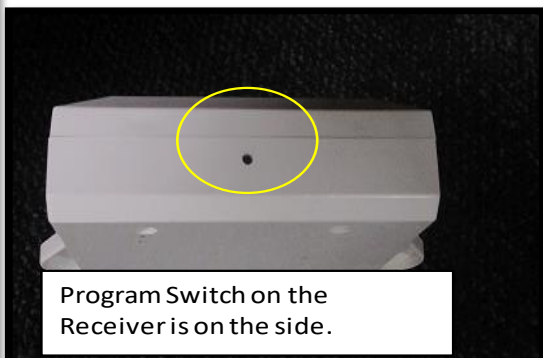
## PROGRAMMING REMOTE AND RECEIVER FOR WIRELESS LIGHTS

### PARTS REQUIRED



A WIRELESS REMOTE

B RECEIVER



This manual is the property of:

Regent Caravans  
Warehouse 2/24-32 Stanley Dr  
Somerton VIC 3062  
Tel:(03) 9303 6100

## PROGRAMMING

1. Pick up the remote, slide out the mounting plate from the back and insert the battery into the remote.
2. Press and hold the program switch at the back of the remote with any pin with plastic head, till blue light appears at the front of the remote indicating its ready to be programmed, and then release the pin.
3. Similarly press and hold the program switch at the side of the receiver for 5 seconds till the blue light appears on the master channel of the receiver as shown. Ensure the green light on the receiver is on before pressing the program switch on the receiver, as this indicates the receiver is powered up.
4. After both receiver and remote indicates blue light, press the button you want to program on the remote for master channel.
5. As soon as you press the button the blue light on the receiver will blink and correspondingly a click sound will be heard indicating the receiver is programmed to that button and the blue light on the receiver will go away.
6. Similarly to program other button to different channels on the receiver, again press and hold the program switch on the receiver and as soon as blue light appear on the receiver master channel, release the pin and again press the program switch on the receiver so that the blue light on the receiver jumps to the next channel.
7. When the blue light appears on the next channel on the receiver, press the button on the remote which needs to be programmed and as soon as you press the button on the remote, the blue light on the receiver will blink and correspondingly a click sound will be heard indicating the receiver is programmed to that button and the blue light on the receiver will go away.
8. Similarly you can program the other button as well.

**This manual is the property of:**

Regent Caravans  
Warehouse 2/24-32 Stanley Dr  
Somerton VIC 3062  
Tel: (03) 9303 6100

## DELETE MEMORY OR REPROGRAMMING

In case you want to reprogram the entire thing or delete the entire memory , just Press and hold the programming switch on the receiver for 15 seconds until the blue light starts blinking and eventually stops, indicating all memory has been deleted.

## POINTS TO REMEMBER

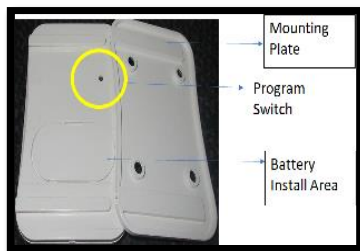
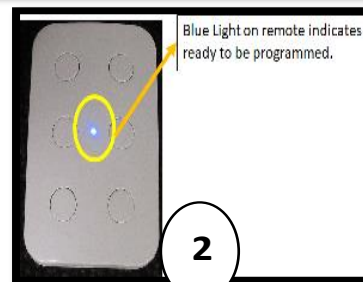
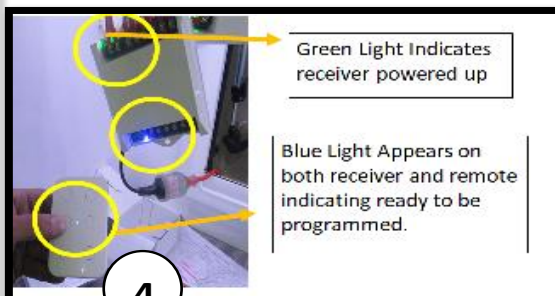
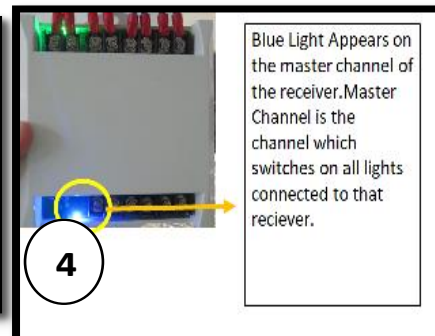
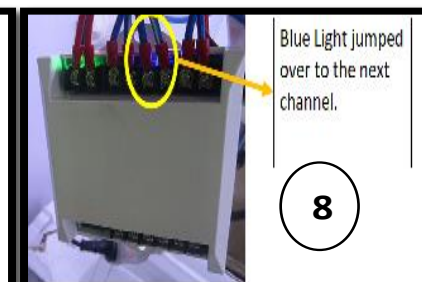
1. During programming the blue light on the remote and receiver should always be on indicating programming mode is on, but after the button is programmed the blue light on the receiver goes off indicating receiver channel has been programmed .

2. After all the buttons are programmed on the remote ,press the program switch at the back of the remote to turn off the blue light indicating the remote is now in operation mode instead of programming mode indicated by blue light on the remote.

**This manual is the property of:**

Regent Caravans  
Warehouse 2/24-32 Stanley Dr  
Somerton VIC 3062  
Tel:(03) 9303 6100

## PHOTOS

**1****2****4****4****6****8**

This manual is the property of:

Regent Caravans  
Warehouse 2/24-32 Stanley Dr  
Somerton VIC 3062  
Tel:(03) 9303 6100